


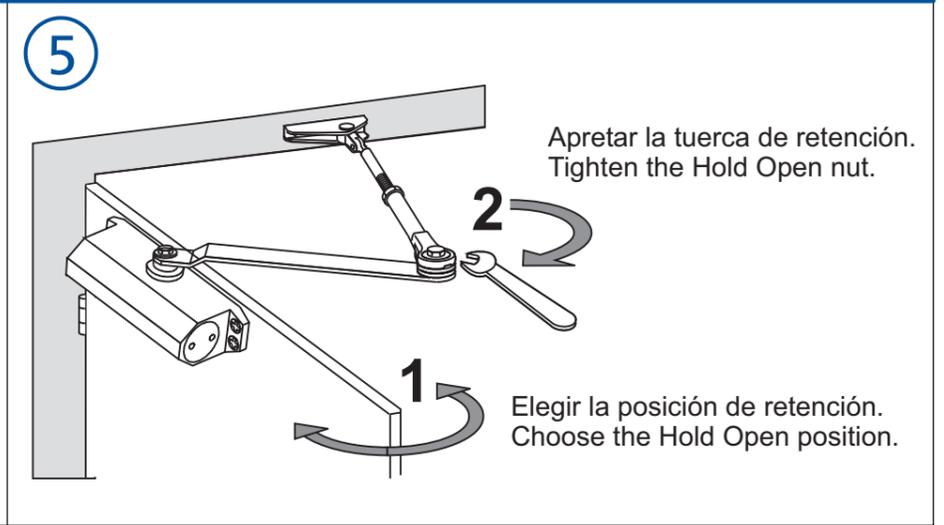
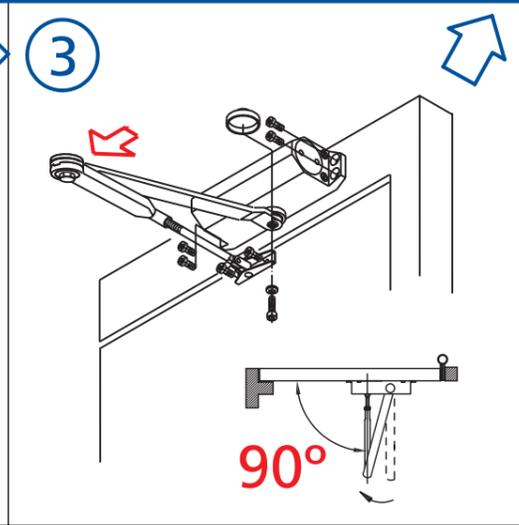
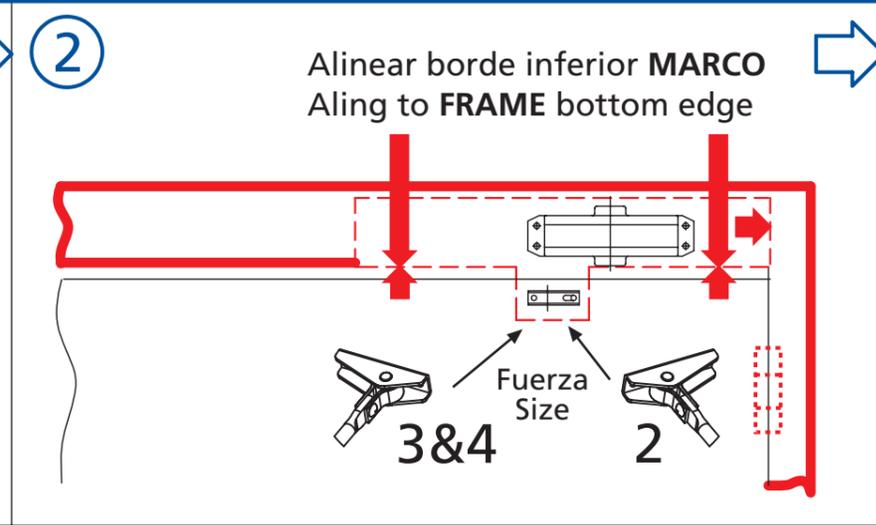
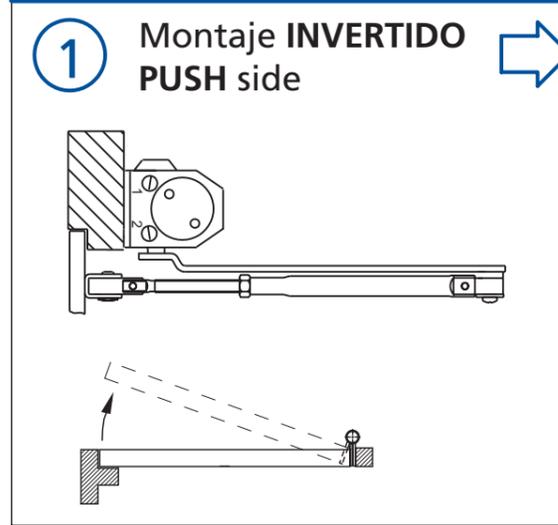
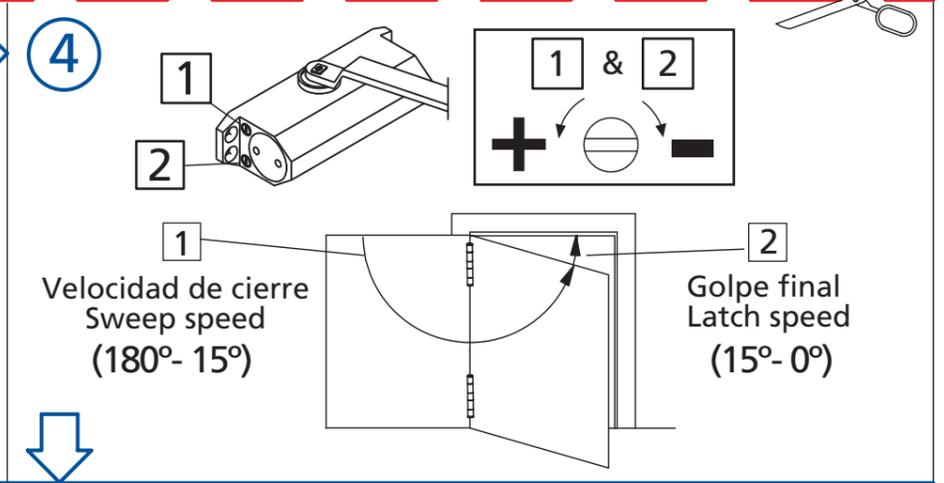
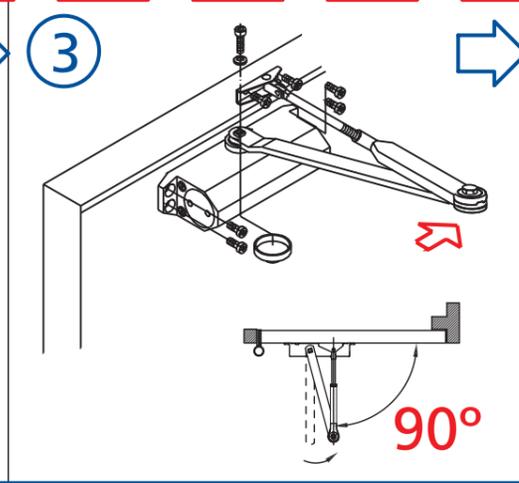
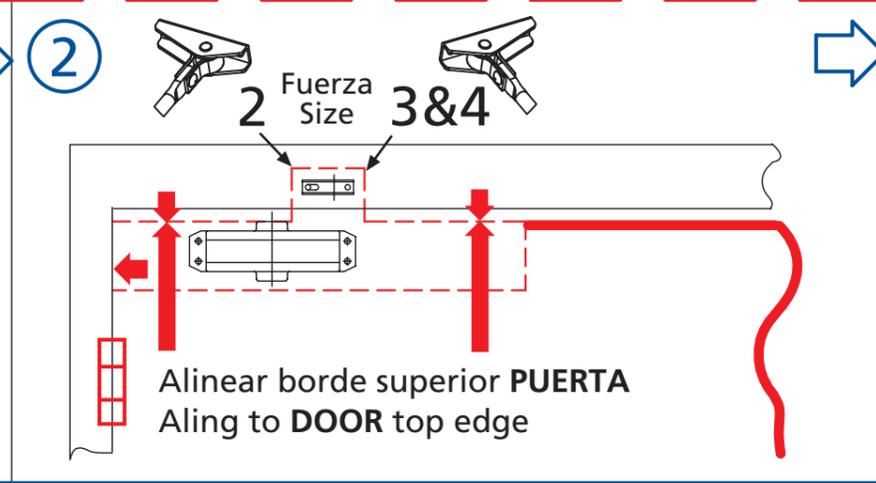


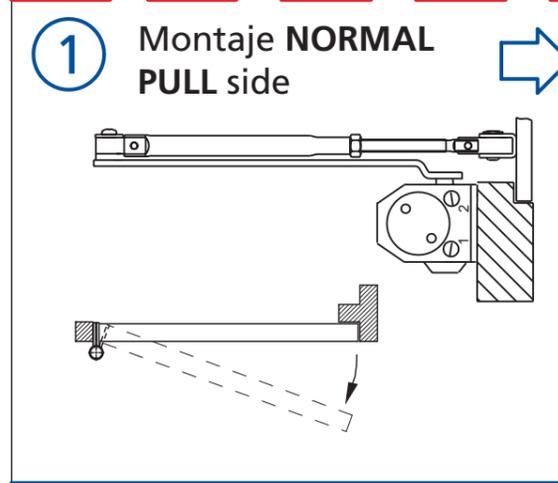



# CT501

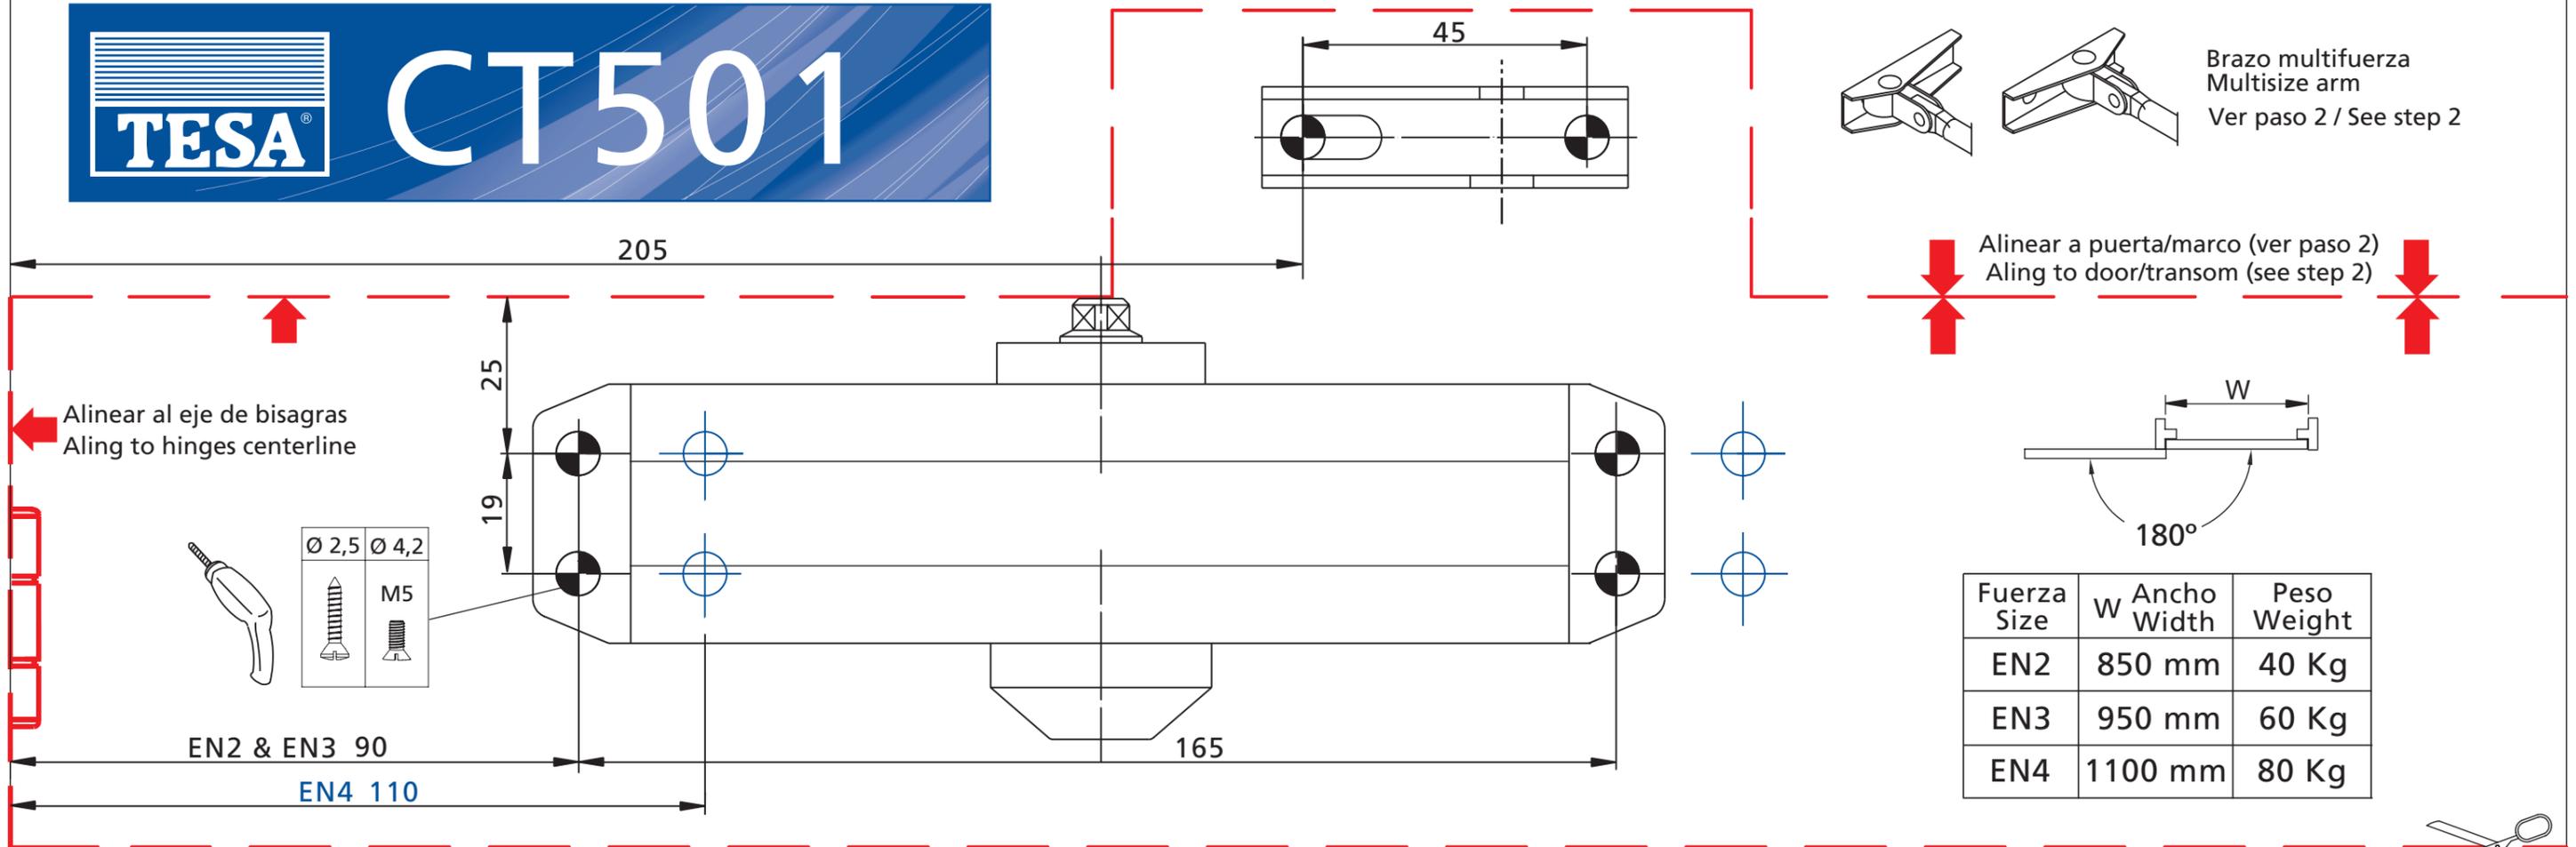

Brazo multifuerza  
Multisize arm  
Ver paso 2 / See step 2

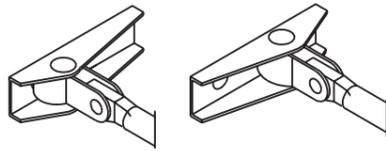


Alinear a puerta/marco (ver paso 2)  
Aligning to door/frame (see step 2)


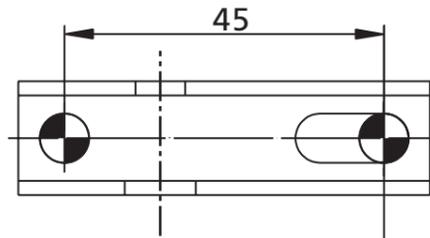
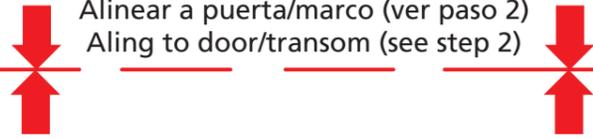


205

Alinear al eje de bisagras  
Aligning to hinges centerline


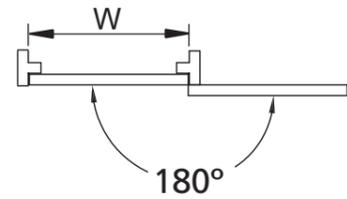


Fuerza Size	W Ancho Width	Peso Weight
EN2	850 mm	40 Kg
EN3	950 mm	60 Kg
EN4	1100 mm	80 Kg

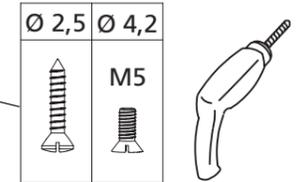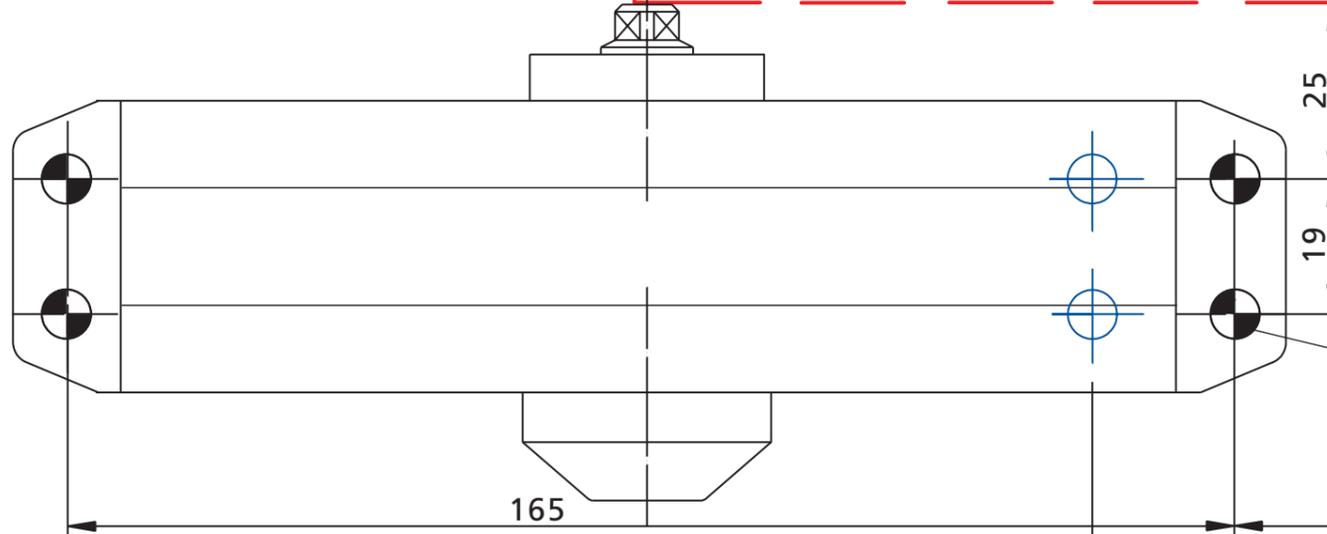

EN2 & EN3 90


EN4 110

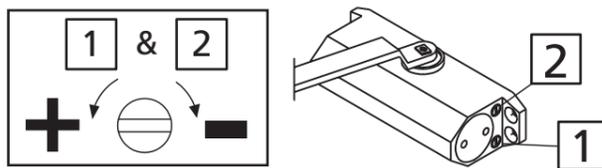


Golpe final  
Latch speed  
(15°- 0°)

Velocidad de cierre  
Sweep speed  
(180°- 15°)

4

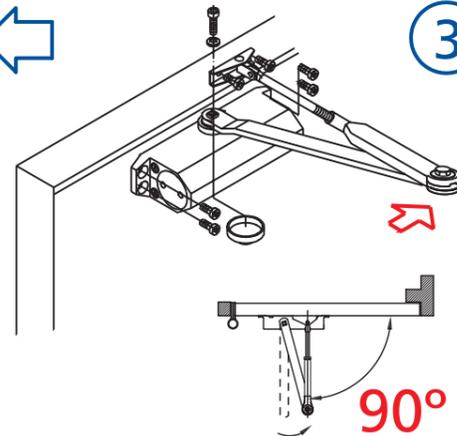

3

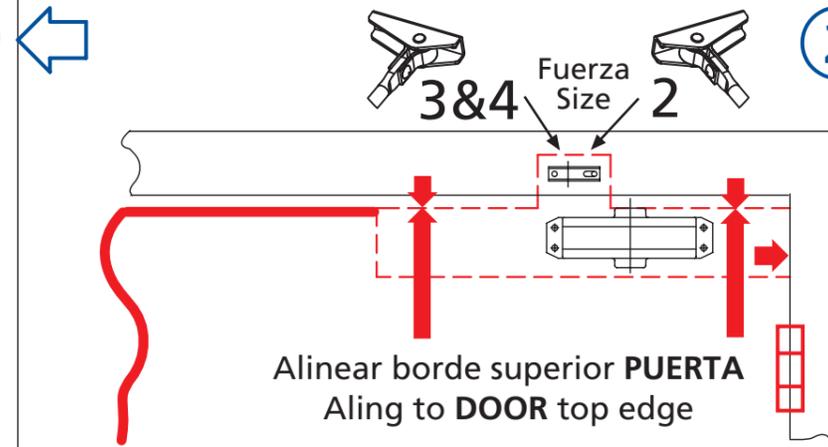


Alinear borde superior PUERTA  
Aligning to DOOR top edge

2

Montaje NORMAL  
PULL side


1

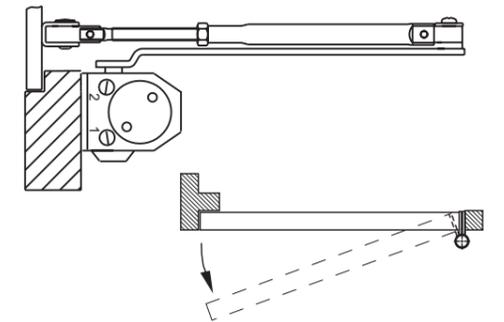

5


Apretar la tuerca de retención.  
Tighten the Hold Open nut.

Elegir la posición de retención.  
Choose the Hold Open position.

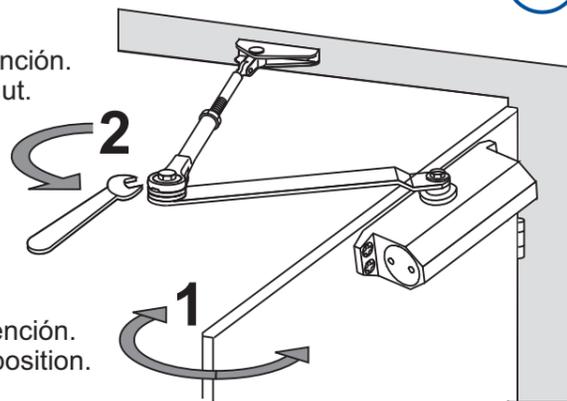

3

Alinear borde inferior MARCO  
Aligning to FRAME bottom edge

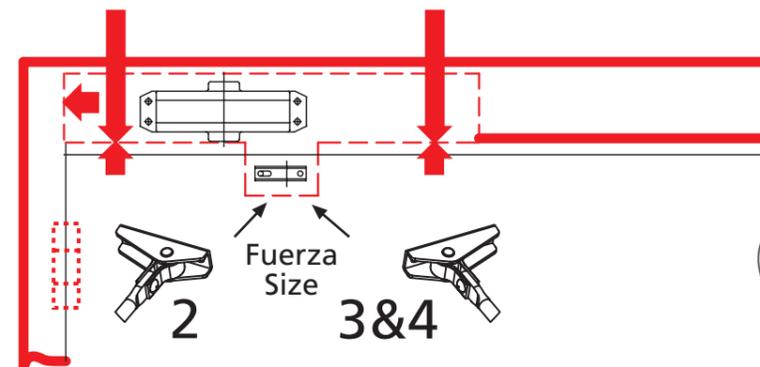

2

Montaje INVERTIDO  
PUSH side

1

